



◆ 9.1 Parti di ricambio / Spare parts

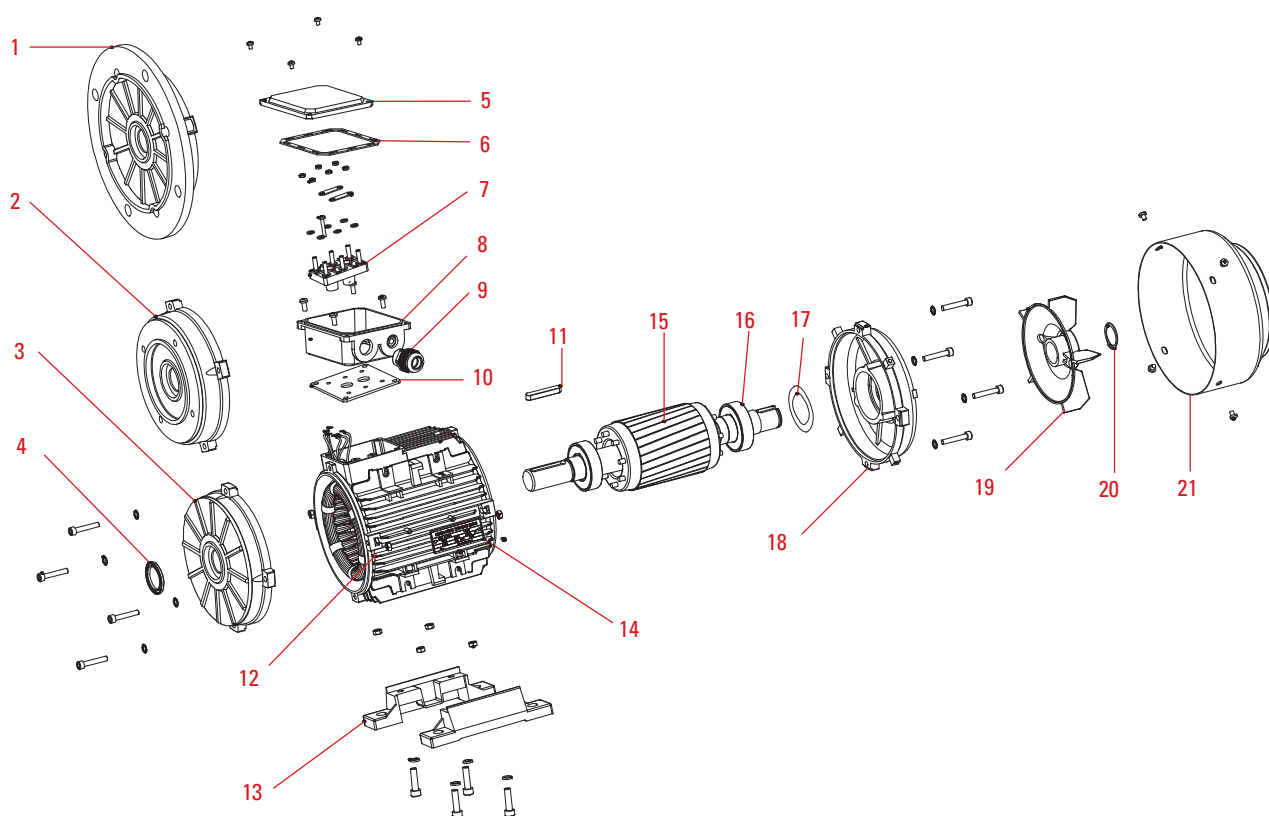

Parti di ricambio motori in alluminio / Aluminium motor spare parts

1.	Flangia B5	B5 flange
2.	Flangia B14	B14 flange
3.	Scudo B3	B3 endshield
4.	Paraolio	Oilseal
5.	Coperchio morsetteria IP65	Terminal box IP65 (cover)
6.	Guarnizione coperchio morsetteria	Terminal box cover seal
7.	Morsetteria completa	Terminal board
8.	Base morsetteria IP65	Terminal box IP65 (base)
9.	Pressacavo	Cable gland
10.	Guarnizione base morsetteria	Terminal box base seal
11.	Chiavetta albero	Shaft key
12.	Statore avvolto	Wound stator
13.	Piedi B3	B3 feet
14.	Carcassa	Casing
15.	Albero e rotore	Shaft and rotor
16.	Cuscinetti	Bearings
17.	Anello di compensazione	Compensation ring
18.	Scudo posteriore	Back endshield
19.	Ventola di raffreddamento	Cooling fan
20.	Seeger fissaggio ventola	Cooling fan circlip
21.	Copriventola	Fan cover

(tab. 48)

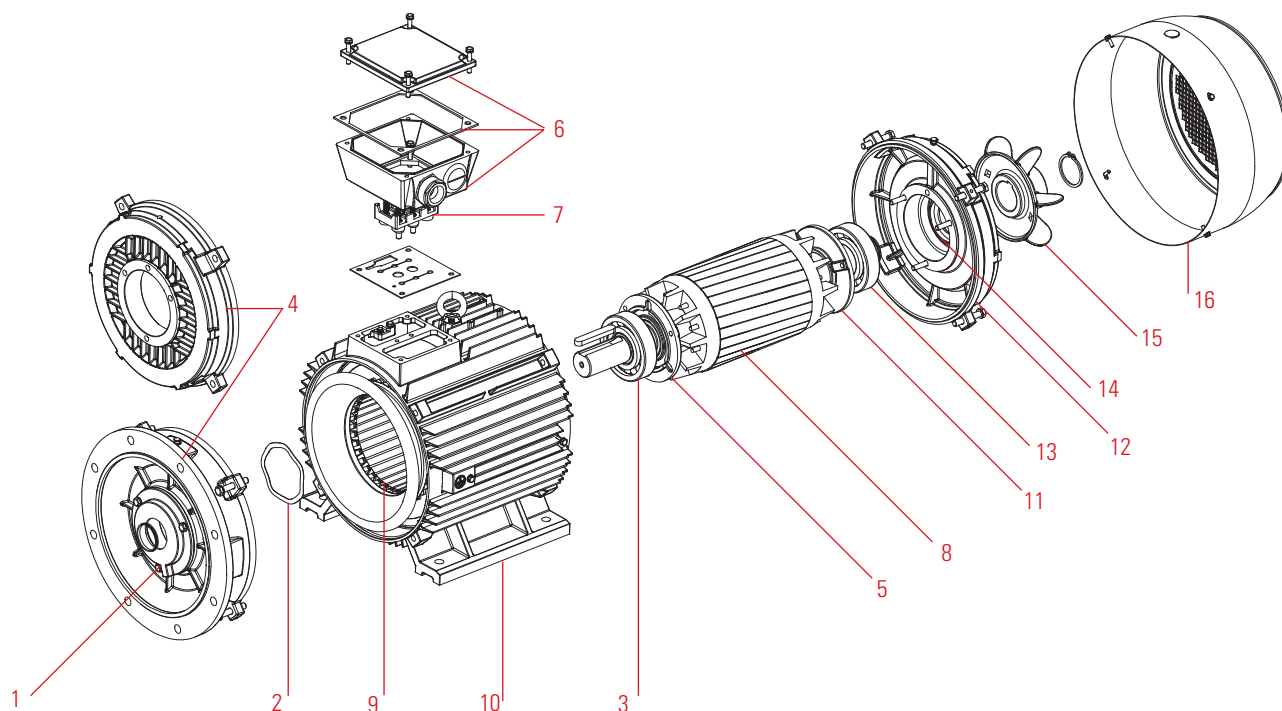

Parti di ricambio motori in ghisa / Cast iron motor spare parts

1.	Cuffia esterna cuscinetto e tenuta	Outer bearing cap with oil seal
2.	Anello di compensazione	Compensation ring
3.	Cuscinetto anteriore	Front bearing
4.	Scudo anteriore	Front endshield
5.	Cuffia interna cuscinetto	Inner bearing cap
6.	Scatola morsettiera	Terminal box
7.	Morsettiera	Terminal board
8.	Rotore	Rotor
9.	Statore avvolto	Wound stator
10.	Carcassa	Casing
11.	Cuffia interna cuscinetto posteriore	Inner bearing rear cap
12.	Scudo posteriore	Back endshield
13.	Cuscinetto posteriore	Rear bearing
14.	Cuffia esterna cuscinetto e tenuta	Outer bearing cap with oil seal
15.	Ventola di raffreddamento	Cooling fan
16.	Copriventola	Fan cap

(tab. 49)